


◆ Information

This installation guide provides information required for product installation and usage. RMB-100 is equipped with a receipt printer to provide output status to users visibly and audibly by using sound and LED while printing a receipt.


We at BIXOLON maintain ongoing efforts to enhance and upgrade the functions and quality of all our products. In following, product specifications and/or user manual content may be changed without prior notice.

◆ Contents

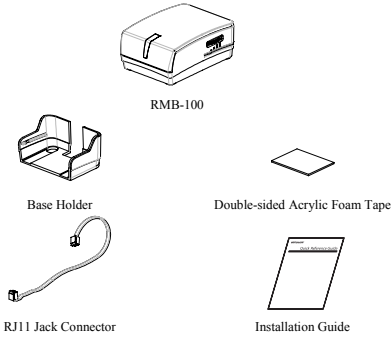


◆ Installation

1. Prior to installation, turn off power on the printer and all other peripherals.
2. After turning the RMB-100 over, connect the RJ11 jack connector to the DK port as shown in the figure below.
3. Arrange the RJ11 cable properly as shown in the figure below.

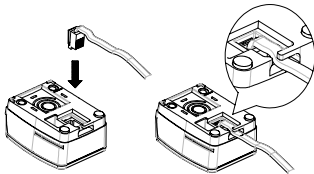


4. Connect the RMB-100 to the DK port of the printer.

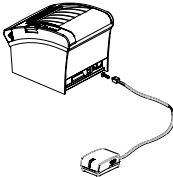


◆ Supporter Installation

1. Assemble the base holder attached to the RMB-100 and attach it to the desired location using double-sided acrylic foam tape.

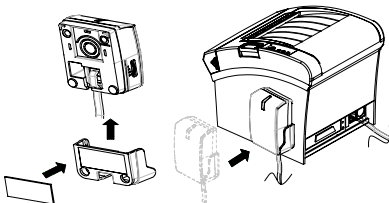

◆ Setting the Dip Switches


1. With dip switches, you can select one of 15 melodies.

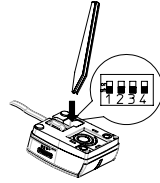

DIP S/W				MELODY	DIP S/W				MELODY
1	2	3	4		1	2	3	4	
0	0	0	0	No Sound	0	1	1	0	Musette Bach
1	0	0	0	Bird	0	1	0	1	Symphonie No.9 Choral
0	1	0	0	Cuckoo	0	0	1	1	Sinfonia Pastorale
0	0	1	0	Trumpet	0	1	1	1	Waltz
0	0	0	1	Bell Ringing	1	1	1	0	Le Primavera
1	1	0	0	Gavotte	1	1	0	1	Symphonie Fantastique
1	0	1	0	Serenade by Haydn	1	0	1	1	Serenade by Mozart
1	0	0	1	Menuet	1	1	1	1	Die Moldau

◆ Volume Adjustment

1. With the volume controller placed on the side, you can control the volume.

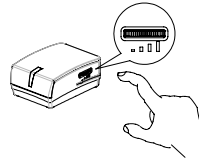

◆ WEEE (Waste Electrical and Electric Equipment)



This mark shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

◆ CE



◆ FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- i) This device may not cause harmful interference, and ii) This device must accept any interference received, including interference that may cause undesired operation.

🏠 BIXOLON Co., Ltd.

- Website: <http://www.bixolon.com>

• Korea Headquarters

(Add) 7th-8th FL, Mirasasset Venture Tower, 685, Sampyeong-dong, Bundang-gu, Seongnam-si, Gyeonggi-do, 463-400, Korea
(Tel.) +82-31-218-5500

• U.S. Office

(Add) BIXOLON America Inc., 3171 Fujita St, Torrance, CA 90505
(Tel.) +1-858 764 4580

• Europe Office

(Add) BIXOLON Europe GmbH, Tiefenbroicher Weg 35 40472 Düsseldorf
(Tel.) +49 (0)211 68 78 54 0

BIXOLON MELODIST 설치 안내서


RECEIPT BIXOLON MELODIST RMB-100

◆ 안내

본 설치 안내서는 제품 설치 및 사용에 필요한 내용을 안내하고 있습니다. RMB-100 은 영수증 프린터에 장착하여 영수증 출력 시 사용자에게 소리 및 LED 를 이용하여 시각적, 청각적으로 출력 상황을 제공합니다.


저희 (주)빅솔론은 제품의 기능과 품질 향상을 위하여 지속적인 개선을 하고 있습니다. 이로 인하여 제품의 사양과 매뉴얼의 내용은 사전 통보 없이 변경될 수 있습니다.

◆ 내용물 확인

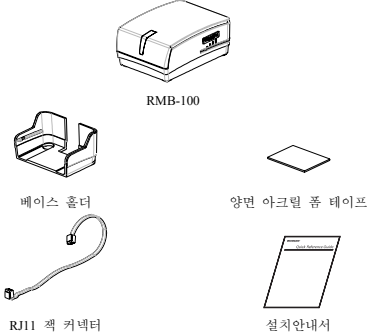


◆ 설치

1. 설치 전 프린터 및 주변기기의 전원을 꺼주십시오.
2. RJ11 잭 커넥터를 그림과 같이 RMB-100 을 뒤집어 DK 포트에 잭 커넥터를 연결해주시십시오.
3. 아래 그림과 같이 RJ11 선을 깔끔하게 정리해주시십시오.

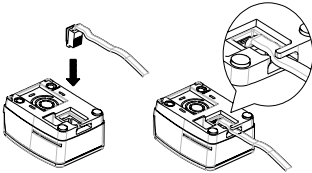


4. 프린터의 DK 포트에 RMB-100 을 연결해주시십시오.

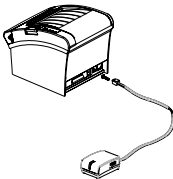


◆ 거치대 설치

1. 베이스 홀더에 양면 아크릴 폼 테이프를 붙인 후 RMB-100 을 결합, 원하는 위치에 부착해주시십시오.

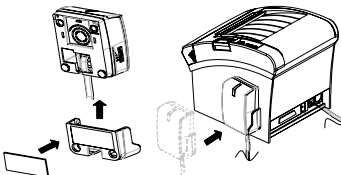

◆ DIP 스위치 설정


1. DIP 스위치를 이용하여 15 곡의 멜로디 선택이 가능합니다.

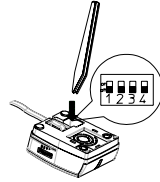

DIP S/W					멜로디	DIP S/W					멜로디
1	2	3	4	0		1	2	3	4	0	
0	0	0	0	0	소리없음	0	1	1	0	Musette Bach	
1	0	0	0	0	새소리	0	1	0	1	Symphonie No.9 Choral	
0	1	0	0	0	빠꾸기소리	0	0	1	1	Sinfonia Pastorale	
0	0	1	0	0	나팔소리	0	1	1	1	Waltz	
0	0	0	1	1	딩동	1	1	1	0	Le Primavera	
1	1	0	0	0	Gavotte	1	1	0	1	Symphonie Fantastique	
1	0	1	0	0	Serenade by Haydn	1	0	1	1	Serenade by Mozart	
1	0	0	1	1	Menuet	1	1	1	1	Die Moldau	

◆ 음량 조절

1. 열면에 위치한 볼륨조절기를 사용하여 음량 조절이 가능합니다.

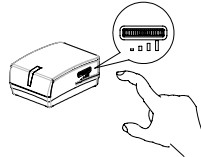

◆ WEEE (Waste Electrical and Electric Equipment)



This mark shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

◆ CE



◆ FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions.

- i) This device may not cause harmful interference, and ii) This device must accept any interference received, including interference that may cause undesired operation.

☎ BIXOLON Co., Ltd.

• 웹사이트 <http://www.bixolon.com>

• 한국 본사

(주)스 463-400, 경기도 성남시 분당구 삼평동 685 번지 미래에셋벤처타워 7층-8층
(전화) +82-31-218-5500

• 미주 지사

(주)스 BIXOLON America Inc., 3171 Fujita St, Torrance, CA 90505
(전화) +1-858 764 4580

• 유럽 지사

(주)스 BIXOLON Europe GmbH, Tiefenbroicher Weg 35 40472 Düsseldorf
(전화) +49 (0)211 68 78 54 0